



©IBS
888-634-4289

1	50003462	ROTISSERIE BURNER ASSEMBLY	1
2	50003472	ROTISSERIE ELECTRODE	1
3	50004146	TUBE AND ORFICE ASSEMBLY - LP	1
3a	50004146	TUBE AND ORFICE ASSEMBLY - NG	1
4	50003473	ELECTRODE ROTISSERIE WIRE	1
5	94D0134	ROTISSERIE KIT - w/o spit rod	1
6	20305074	ROTISSERIE MOTOR BRACKET	1
7	50000399	SUPPORT ROTISSERIE SPIT ROD	1
8	91D0131	ROTISSERIE MOTOR ONLY	1
9	20300417	SPIT ROD 38IN	1
10	30005843	FRONT LID ASSEMBLY - SS	1
11	30005342	WARMING RACK	1
12	30005396K	REAR LID ASSEMBLY	1
13	91D0132	BURNER MAIN ANGLE ASSEMBLY - INCL. ELECTRODE AND WIRE	5
15	91D0108	ELECTRODE WIRE	5
16	91D0107	ELECTRODE ONLY - MAIN	5
17	50000892	BURNER GASKET	5
18	50001300	FLASH TUBE	2
19	30005707	VC LOGO	1
20	20300394	TEMPERATURE GAUGE	1
21	50005393	CURVED HANDLE GRIP SET	1
22	50000365	LID BUMPER SET (6)	1
23	50000355	HARDWARE LID SET	1
24	30005505	CONSOLE w/RIVNUT ASSEMBLY	1
25	50004324	WIRE HARNESS	1
26	50003110	BATTERY CASE	1
27	50002788	IGNITOR PUSHBUTTON	1
28	50002533	IGNITOR PLATE	1
29	50004221	IGNITOR MODULE ASSEMBLY	1
30	50003002	BEZEL	6
32	50003984	KNOB	6
34	20302818	VALVE MANIFOLD ASSEMBLY - LP	1
34a	20302819	VALVE MANIFOLD ASSEMBLY - NG	1
35	50000672	FLEXIBLE CONNECTOR 28IN.	1
36	91D0111	HOSE REGULATOR - LP	1
37	91D0112	CONNECTOR HOSE - NG	1
38	50004781K	SUPPORT GRILL / GREASE TRAY	1
39	50001950K	GREASE TRAY	1
40	50004799	REAR COVER	1
41	50004814	GREASE TRAY FRONT ASSEMBLY	1
42	50004733	FASCIA BRACKET RIGHT	1
43	50004734	FASCIA BRACKET LEFT	1
44	20304959	HEAT PLATE	5
45	30005363	COOK GRATE	4
46	50004204	DRAWER HANDLE CURVED -128mm	1
47	50004855	HARDWARE BAG	1
48	50002384	12 FOOT HOSE - NG	1
49	20300395	BEZEL FOR TEMPERATURE GAUGE	1
N/S	20304636	CONVERSION KIT - LP TO NG	0
N/S	20304640	CONVERSION KIT - NG TO LP	0
N/S	30005801	USER MANUAL	1
N/S	20304986	ASSEMBLY MANUAL	1
N/S	20304983	PARTS LIST	1
N/S	VCS500BIC	GRILL COVER	0

©IBS

888-634-4289

©IBS

888-634-4289