



iBuyGrillParts.com  
888-634-4289

Ref#	Part#	Description	Qty Reqd
1	50003295	BASE ASSEMBLY	1
2	50003518	REAR LID ASSEMBLY (REQUIRES PART 50000355)	1
3	50003172	LID ASSEMBLY FRONT (REQUIRES PART 50000355)	1
4	50001643	TEMPERATURE GAUGE SUBS 16 20300397 & 20300394	1
5	50002798	LOGO	1
6A	50003180	DOOR ASSEMBLY LEFT	1
6B	50003183	DOOR ASSEMBLY RIGHT	1
7	50002033	DOOR MAGNET	4
8	50003236	BACK PANEL	1
9	50002888	CYLINDER RETAINER (LP MODELS ONLY)	1
10	50003243	INTERNAL SHELF	1
11	50003286	BATTERY SHROUD ASSEMBLY	1
12	50003190	DRAWER ASSEMBLY	1
13	50003232	UPPER REAR PANEL	1
14	50001619	IGNITOR MODULE- PUSHBUTTON NOT INCL. (ON OLDER VC GRILLS SOME MODIFICATION MAY BE REQUIRED TO MOUNT)	1
15	50001844B	GREASE PAN SUPPORT	2
16	50003287B	GREASE PAN ASSEMBLY	1
17	50001845	GREASE CUP	2
18	50003231	FLASH TUBE	1
19	50003133K	BURNER ASSEMBLY - INCLUDES ELECTRODE AND WIRE	6
20	50000431	ELECTRODE MAIN SHORT	2
21	91D0108	ELECTRODE WIRE MAIN LONG - NEED 91D0107 FOR ELECTRODE	4
21A	91D0107	ELECTRODE ONLY - MAIN	4
22	50000892	BURNER GASKET	6
23A	50002830	VALVE, MANIFOLD ASSEMBLY (LP)	1
23B	50002831	VALVE, MANIFOLD ASSEMBLY (NG)	1
24	50002310	REGULATOR ASSEMBLY (LP)	1
25	50002422	HOSE NATURAL GAS	1
26	50002384	12 HOSE NATURAL GAS	1
28A	50003238	TUBE & ORIFICE ASSEMBLY (LP)	1
28B	50003239	TUBE & ORIFICE ASSEMBLY (NG)	1
29	50003129	ROTISSERIE ELECTRODE	1
30	50003230	CONSOLE	1
31	50003237B	CONSOLE REINFORCEMENT	1
32	50002533	IGNITOR PLATE	2
33	50002788	IGNITOR PUSH BUTTON	1
34	50003002	BEZEL ASSEMBLY (BACKLIT)	7
35	50003001	HARNESS - BACKLIT KNOB & ROTISSERIE	1
36	50000355	PIVOT PIN & BOLT SET - SEND WITH LID ASSEMBLY	1
37	50000385	LID BUMPERS (SET OF 6)	1
38	50000642	GRIP HANDLE SET	1
39	50003313	WARMING RACK (ENAMEL)	1
40	50002241	GRIDDLE PLATE	1
41	50001227	COOKING GRIDS (PACK OF 4)	1
42	50000962	ROTISSERIE SPIT ROD 38	1
43	50003106	SIDE SHELF LIGHT ASSEMBLY (PERISCOPE)	1
44	50000181	ROTISSERIE MOTOR	1
45	50000287	ROTISSERIE FORK KIT	1
46	50000399	ROTISSERIE SPIT ROD SUPPORT	1
47	50003115	ROTISSERIE MOTOR BRACKET	1
48	50003003	KNOB ASSEMBLY (BACKLIT)	7
49	50003400	CASTER 3 X 1 1/4	4
50	50003198	STABILIZER BRACKET ASSEMBLY	2
51	50003014	HANDLE DOOR ROUND	3
52	50003404	RIGHT SHELF	1
53	50003385	LEFT SIDE SHELF	1
54A	50002228	SIDE BURNER VALVE ASSEMBLY (LP)	1
54B	50002229	SIDE BURNER VALVE ASSEMBLY (NG)	1
55	50000816	IGNITOR KIT - SIDE BURNER	1
56A	50002238	TUBE & ORIFICE SIDE BURNER DUAL (LP)	1
56B	50002277	TUBE & ORIFICE SIDE BURNER DUAL (NG)	1
57A	50002233	TUBE & ORIFICE SIDE BURNER DUAL (LP)	1
57B	50002307	TUBE & ORIFICE SIDE BURNER DUAL (NG)	1
58	50001092	SIDE BURNER HOSE	1
59	50003258	SIDE BURNER ELECTRODE SHORT (8)	1

iBuyGrillParts.com  
888-634-4289

60	50003259	SIDE BURNER ELECTRODE LONG (16)	1
61	50001044	BURNER (FOR THE SIDE BURNER)	2
62	50001035	SIDE BURNER GRATE	2
N/S	VCDC6S	DELUXE BBQ COVER	1
63	50003401	COVER SIDE BURNER DUAL ASSEMBLY	1
64	50002551	BEZEL - SIDE BURNER	2
65	50003003	KNOB H-STYLE - SIDE BURNER	2
66	50000777	HEAT PLATE - SS	6
67	50003011	UTENSIL HOOKS - PKG OF 3	1
68	50003390	HARDWARE BAG	1
N/S	50002198	CABINET FORM BLOCK - THERMOPLASTIC	4

iBuyGrillParts.com  
888-634-4289

iBuyGrillParts.com  
888-634-4289